




COMPONENTS INCLUDED

- ※ Single-phase pump
- ※ EASYPRESS electronic control device with 1.5 bar restart pressure
- ※ GSR quick-connect coupling
- ※ 1.5 metres cable with Schuko plug

EXAMPLES OF INSTALLATION

- ※ To minimize frequent restarts resulting from brief usage or system leaks, it is advisable to install an expansion tank pre-filled to **1.2 bar** (e.g., tank 1SF).

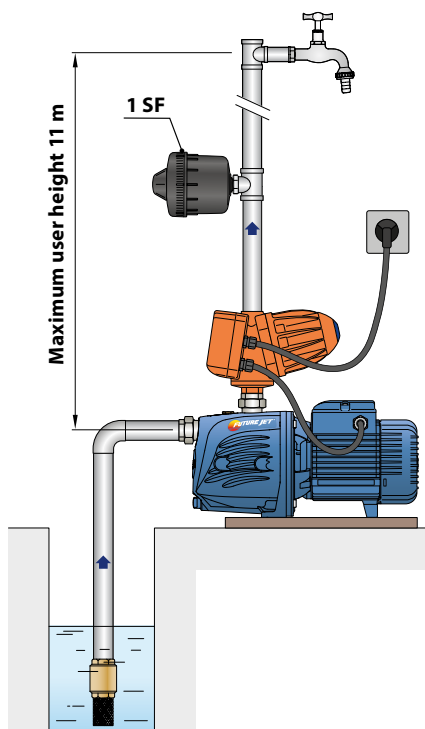

INSTALLATION AND USE

EASYPUMP is a ready-to-use and easy-to-install pressurization system, designed to increase water pressure for residential use or irrigation purposes.

EASYPUMP features a single-phase pump paired with an electronic control unit, known as EASYPRESS.

EASYPRESS ensures automatic activation or deactivation of the pump based on water consumption, offering protection against dry running and system leaks. It also has an integrated non-return valve and a micro-accumulator that allows operation without the need for an expansion tank.

EASYPUMP activates automatically when the system's pressure drops below the preset threshold (**1.5 bar**) and continues to run as long as water is flowing.

TYPE	POWER (P ₂)		Q l/min	H metres
	kW	HP		
Single-phase				
3CPm 80-EP	0.45	0.60	5 – 80	38 – 5
4CPm 80-EP	0.55	0.75	5 – 80	50 – 10
4CPm 100-EP	0.75	1	5 – 130	50 – 5
3CRm 80-EP	0.45	0.60	5 – 80	38 – 5
4CRm 80-EP	0.55	0.75	5 – 80	50 – 10
4CRm 100-EP	0.75	1	5 – 130	50 – 5
CPm 158-EP	0.75	1	10 – 90	34 – 25
FUTURE JETm 2C - EP	0.75	1	5 – 120	52 – 10
FUTURE JETm 2A - EP	0.90	1.25	5 – 120	56 – 13.7
JCRm 2C - EP	0.75	1	5 – 70	51 – 24
JCRm 2A - EP	0.90	1.25	5 – 70	55 – 28
PLURIJETm 3/80-EP	0.48	0.65	5 – 80	38 – 5
PLURIJETm 4/80-EP	0.55	0.75	5 – 80	50 – 10
PLURIJETm 4/100-EP	0.75	1	5 – 130	50 – 5