




**FUTURE JET-EP**

### COMPONENTS INCLUDED

- ※ Single-phase pump
- ※ EASYPRESS electronic control device with 1.5 bar restart pressure
- ※ GSR quick-connect coupling
- ※ 1.5 metres cable with Schuko plug

### EXAMPLES OF INSTALLATION

- ※ To minimize frequent restarts resulting from brief usage or system leaks, it is advisable to install an expansion tank pre-filled to **1.2 bar** (e.g., tank **1SF**).

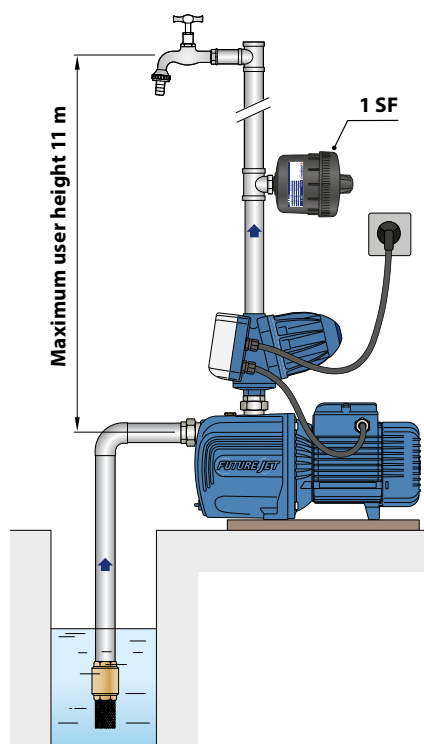

### INSTALLATION AND USE

**EASYPUMP** is a ready-to-use and easy-to-install pressurization system, designed to increase water pressure for residential use or irrigation purposes.

**EASYPUMP** features a single-phase pump paired with an electronic control unit, known as EASYPRESS. EASYPRESS ensures automatic activation or deactivation of the pump based on water consumption, offering protection against dry running and system leaks. It also has an integrated non-return valve and a micro-accumulator that allows operation without the need for an expansion tank.

**EASYPUMP** activates automatically when the system's pressure drops below the preset threshold (**1.5 bar**) and continues to run as long as water is flowing.

TYPE	POWER (P <sub>2</sub> )		Q l/min	H metres
	kW	HP		
<b>Single-phase</b>				
<b>3CPm 80-EP</b>	0.45	0.60	5 – 80	38 – 5
<b>4CPm 80-EP</b>	0.55	0.75	5 – 80	50 – 10
<b>4CPm 100-EP</b>	0.75	1	5 – 130	50 – 5
<b>3CRm 80-EP</b>	0.45	0.60	5 – 80	38 – 5
<b>4CRm 80-EP</b>	0.55	0.75	5 – 80	50 – 10
<b>4CRm 100-EP</b>	0.75	1	5 – 130	50 – 5
<b>CPm 620-EP</b>	0.75	1	10 – 100	34 – 21
<b>FUTURE JETm 2C - EP</b>	0.75	1	5 – 120	47 – 6
<b>FUTURE JETm 2A - EP</b>	1.1	1.5	5 – 120	56 – 13.7
<b>FUTURE JETm 2C ST - EP</b>	0.75	1	5 – 100	47 – 6
<b>FUTURE JETm 2A ST - EP</b>	1.1	1.5	5 – 100	56 – 13.7
<b>PLURIJETm 3/80-EP</b>	0.48	0.65	5 – 80	38 – 5
<b>PLURIJETm 4/80-EP</b>	0.55	0.75	5 – 80	50 – 10
<b>PLURIJETm 4/100-EP</b>	0.75	1	5 – 130	50 – 5